By
D. BOLLEN

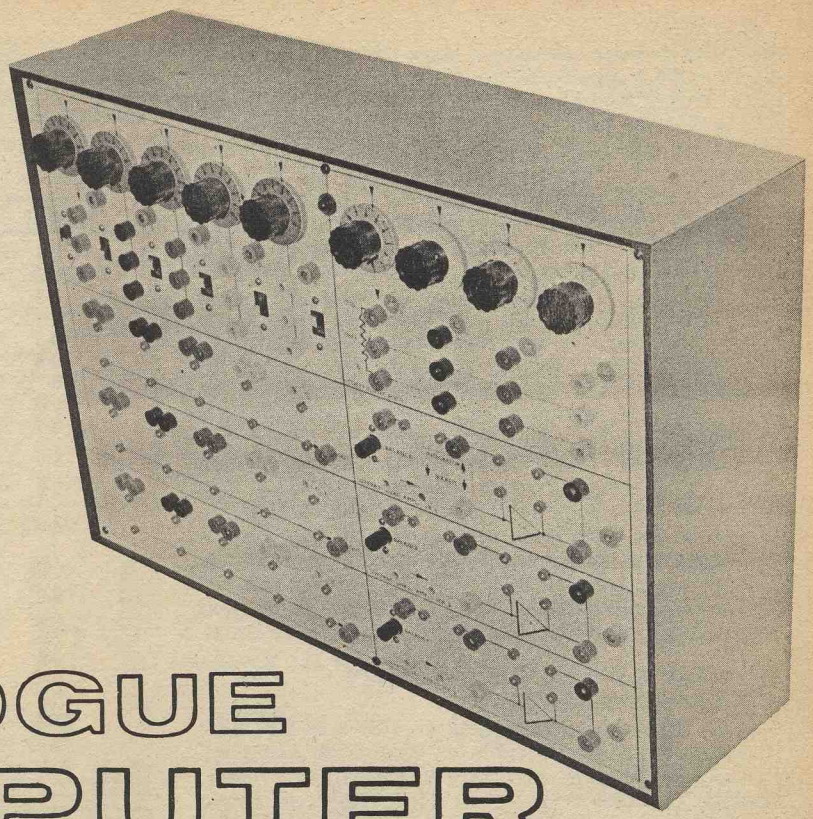

PEAC
ANALOGUE COMPUTER

THE constructional details for UNIT "A" were completed last month. UNIT "A" is, itself, a complete, self-contained computing equipment, and the method of operation, with practical examples, is described in this article.

PATCHING LEADS

The best plugs to use for patching the computer are those of "split-pin" construction, as they can quickly be attached to wires without the aid of a screwdriver. It is a help if plugs are obtained in various colours, and are mated to different coloured wires to allow easy identification.

For the majority of problems capable of solution by UNIT "A", certain patching leads may be left in position on the front panel. For example, coefficient potentiometers are almost always used with the "0" end of their resistance track connected to earth (link SK3 to SK4 for CP1, CP2, CP3, and CP4, Fig. 2.7).

Similarly, until such time as integrator mode switching is brought into use, the integrator sockets depicted in Fig. 2.9 are joined together by means of a special three-way patching lead consisting of two short lengths of wire joined by a plug, with a plug at each end. Looking at Fig. 2.9, OA1/SK4, SK9, and SK10 are linked, and repeat for OA2 and OA3. Three more semi-permanent patching leads are made up to link each operational amplifier to its companion summer network. Connect OA1/SK8 to S1/SK5, and do the same for OA2/SK8–S2/SK5, and OA3/SK8–S3/SK5.

The rearrangeable patching leads should be of assorted lengths and colours, the longest to patch from, say, CP4/SK2 to S3/I1/SK1, diagonally across the UNIT "A" front panel, and the shortest to link nearly adjacent sockets.

COMPUTING RESISTORS

If a comprehensive range of ± 1 per cent high stability computing resistors was purchased all at once, to meet every requirement, the cost would probably exceed £20. There are after all 101 preferred values in a ± 1 per cent range covering resistors from only 10 kilohm to 100 kilohm. Nevertheless, in the period when the computer operator is learning how to handle PEAC, and a high degree of accuracy is not essential, the majority of ordinary problem set-ups can be catered for by a small number of ± 1 per cent and ± 2 per cent plug-in resistors. A resistor selection list, with suggested values of R_f and R_{in} for standard op-amp closed-loop gains, is given in Table 4.1. Also, a component list included in this article sets out minimum quantities, with tolerances, of computing resistors.

Computing capacitors will be discussed later, in connection with integration.

SETTING UP THE VOLTAGE SOURCE

To set up all voltage source outputs, first remove the dials from VR6 to VR10 (Fig. 2.2), and turn the potentiometer spindles fully anticlockwise. If the potentiometers have flats on their spindles, make up blanking pieces consisting of small segments of hardwood or plastic, so that control knobs can be conveniently located at a selected position on each spindle. Connect the positive lead of a sensitive d.c. voltmeter (0–1V, 20 kilohm/V) to VS1/SK1, and the negative voltmeter lead to VS1/SK4 (Fig. 2.6), then set slide switch S1 for a positive voltage output. Switch on the computer power supply and S6.

Carefully rotate VR6 spindle clockwise until a very small voltage appears, just sufficient to slightly deflect